



Anchor Catalogue



Anchor Installation Guide



Lifeline Catalogue



Lifeline Installation Guide



Ladder Catalogue



Ladder Installation Guide



FrogLine In Use



FrogLink Install Video



TileLink Install Video

WINDOWLINK

Concrete Anchor | www.safetylink.com.au



- ✓ Multi-directional fall protection.
- ✓ For use in concrete and steel column structures.
- ✓ Must be chemically fastened.
- ✓ 316 Stainless steel construction.
- ✓ Single person anchor.
- ✓ Rated at 15kN.
- ✓ Complies with: AS/NZS 1891.4
EN 795:2012, CEN/TS 16415:2013
AS/NZS 5532-2013;
Please contact SafetyLink for installation procedures.

What am I used for?

An anchor point designed for use in concrete structures where the eyebolt will remain concealed until needed for use.

POSITIONING OF CONCRETE ANCHOR POINT

(refer to appendix diagram 2 of the Installation Handbook)

The first ConcreteLink Anchor Point must be in a position easily and safely reached by a secured ladder or a manhole access point.

Testing for Free fall-arrest for one person. 15 kN ultimate strength

1. To comply with Australian Standards each ConcreteLink unit must be tested after installation.
2. Allow sufficient time for curing before testing, see instructions on fastener container.
3. Test consists of ultimate pull out force proof loading to 50% of design purpose of anchorage.
4. *Recommended chemical anchor: Hilti RE500 or Hilti HY200 as per Hilti Product Supplement Data Sheets.* Read instructions on product carefully. The entire surface of the ConcreteLink unit that is in contact with the concrete must have sufficient adhesive gel, as specified on the product.



COMPONENTS: PRODUCT CODE - WINDW001

PRODUCT DESCRIPTION

WindowLink Complete Unit: 316 Stainless Steel

QUANTITY

1

Version 07.17

SafetyLink Pty Ltd | ABN 83 081 777 371
Phone: 1300 789 545 or +61 2 4964 1068 | Fax: 1300 738 071 or +61 2 49641069
info@safetylink.com.au | www.safetylink.com.au


PRODUCT SHEET

POSITIONING LAYOUT


This is a guide only

All working at heights safety procedures must be complied with when installing SafetyLink anchor points. For more information refer to your state or territories current legislation, regulations, policies and codes of practices.

**SPACING MUST BE NO GREATER THAN THE RAFTER LENGTH
PLEASE CONTACT YOUR DISTRIBUTOR IF YOU ARE UNSURE**

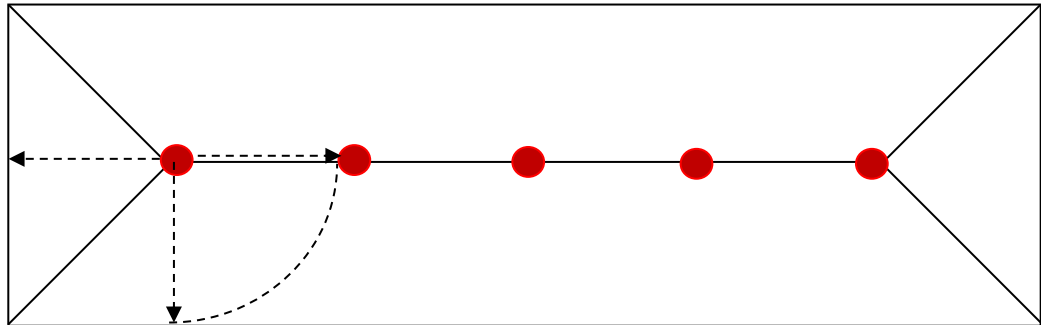

ACCESS, LAYOUT & USE OF A SAFETYLINK ANCHOR SYSTEM
SafetyLink anchor points are positioned by calculating the pendulum effect, this limits the likelihood of a fall past the edge of the roof space. The pendulum effect still applies to a flat roof.

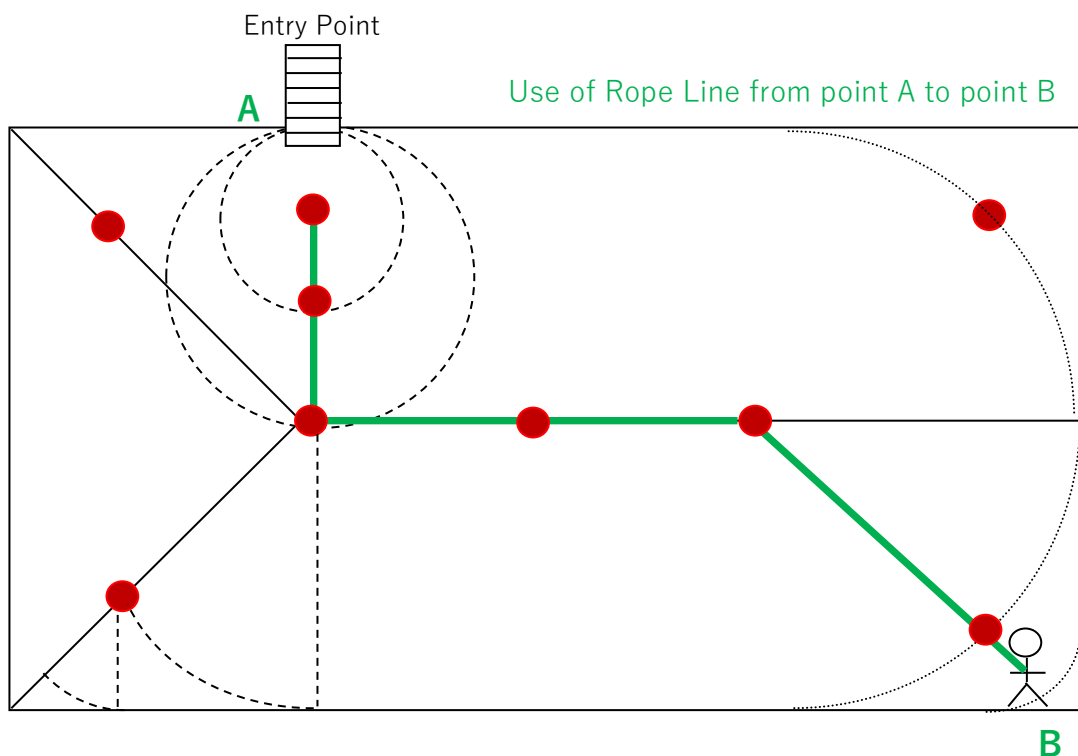

SAFETYLINK HEIGHT SAFETY SYSTEMS MUST ONLY BE INSTALLED AS PER OUR INSTALLATION GUIDES, TO STRUCTURES AS SPECIFIED IN THE INSTALLATION MANUAL FOR EACH PRODUCT. SHOULD ANY DOUBT EXIST IN REGARDS TO THE STRUCTURES INTEGRITY AN ENGINEER SHOULD BE CONSULTED.



Anchor Catalogue



Anchor Installation Guide



Lifeline Catalogue



Lifeline Installation Guide



Ladder Catalogue



Ladder Installation Guide



FrogLine In Use



FrogLink Install Video



TileLink Install Video

Version 07.17

SafetyLink Pty Ltd | ABN 83 081 777 371
Phone: 1300 789 545 or +61 2 4964 1068 | Fax: 1300 738 071 or +61 2 49641069
info@safetylink.com.au | www.safetylink.com.au

PRODUCT SHEET



Anchor
Catalogue



Anchor
Installation Guide



Lifeline
Catalogue



Lifeline
Installation Guide



Ladder
Catalogue



Ladder
Installation Guide



FrogLine
In Use



FrogLink
Install Video



TileLink
Install Video

COPYRIGHT TERMS AND CONDITIONS

Copyright in the material contained on this disc/email belongs to SafetyLink Pty Ltd. You are authorised to reproduce this material subject to the following conditions:

1. No changes to the material may be made without SafetyLink Pty Ltd's prior written consent, which consent may be withheld, granted, or granted subject to conditions in SafetyLink Pty Ltd's discretion. Change includes any alteration, addition or deletion to the material or a part of the material that you reproduce.
2. You must ensure that any material you reproduce is marked "Copyright – SafetyLink Pty Ltd 2006".
3. Where you reproduce parts only of the material that must not cause the part reproduced to be misleading in any way or omit any important safety information.
4. You indemnify SafetyLink Pty Ltd against any claim arising out of your reproduction of the material on this disc/email or any part of it.
5. SafetyLink Pty Ltd can terminate this authority to reproduce this material on 7 day's notice in writing to you at your last known business address, for any reason. You must return this disc/email to SafetyLink Pty Ltd immediately after such a termination takes effect.

If you do not accept these conditions please return the disc/email to SafetyLink Pty Ltd. Your retention of the disc/email will otherwise be evidence of your acceptance of these conditions.

Patents

SafetyLink Pty Ltd has a multitude of patents, patents pending, design applications, trademarks and copyrighted documents both lodged and issued.

Should you wish to know the progress of our intellectual property on a specific product please email us on ip@heightsafety.com.au and quote the product code.

Version 07.17